 
 
 
 
ARADA DELTA FIRE PIT INSTRUCTIONS

COMPONENTS











NO TOOLS

 
NEEDED


FOR OUTDOOR USE ONLY!


<u>DO NOT</u> light fire pit on combustible surfaces such as wooden decking.


ASSEMBLY ORDER.


The Delta Fire Pit should <u>only</u> be assembled in the order shown below. Only slots with matching number of corner holes should be paired up.



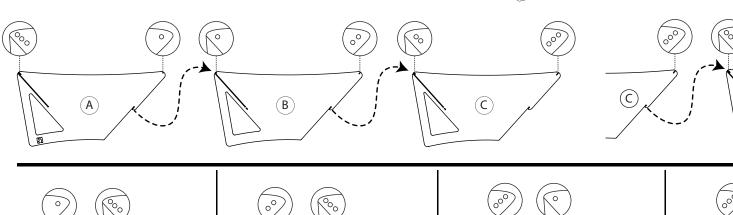

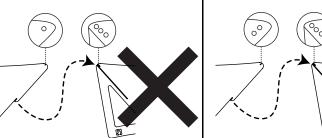

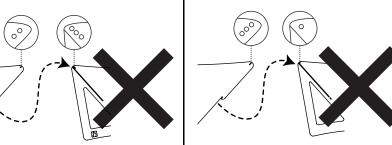

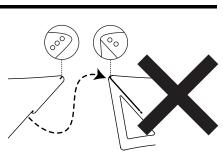


SEE OVERLEAF FOR HINTS ON ASSEMBLY AND DISASSEMBLY OF DELTA FIRE PIT




ARADA DELTA FIRE PIT

ASSEMBLY HINTS


Align matching sides so they are at 90° to one-another. This will ensure that they smoothly slide together.

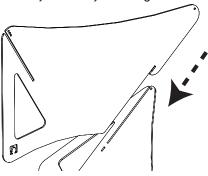


Two of the sides have holes and notches for locking them together.

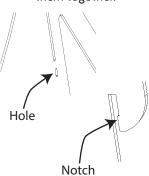

All pieces should slide together fully.

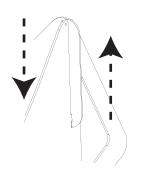

There should be a rounded edge at each corner.

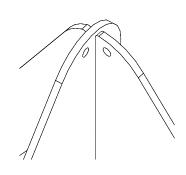

With three sides assembled, place base and griddle pieces into the bottom of the pit...


...now it's ready to light!

DISASSEMBLY HINTS


The Delta Fire Pit can be dismantled for easier transport or storage.

To disassemble, take note of the advice below and simply reverse the order of assembly.


First, carefully dispose of any ashes, then turn the fire pit upside-down.

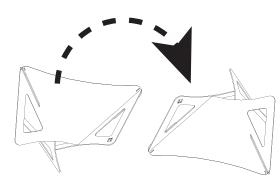

Look for a leg fin with the flame symbol in corner, grasp the handle on the leg fin with your hand.

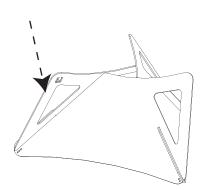

Pull the fin upwards and in direction of slot whilst applying downward force along the top edge. The side will easily pull away.

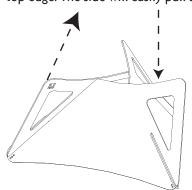



DO NOT dismantle fire pit unless it has cooled and is safe to touch!

Be careful when disposing of hot ashes! Use designated bins where provided.

